



JLINK RX

1. **PRELIMINARY CHECKS**  
Before using the JLINK RX, please check the following items:  
- Ensure the device is connected to the power source.  
- Check the status of the LEDs on the front panel.  
- Verify the connection of the USB cable to the PC.  
- Make sure the software is installed correctly on the PC.

2. **OPERATION**  
The JLINK RX is used to interface with the target device. The following steps describe the basic operation:  
1. Connect the JLINK RX to the target device.  
2. Connect the JLINK RX to the PC via the USB cable.  
3. Launch the JLINK software on the PC.  
4. Select the target device in the software.  
5. Click the 'Connect' button to establish the connection.

3. **TRoubleshooting**  
If you encounter any issues while using the JLINK RX, please refer to the following troubleshooting steps:  
- Check the power supply and connections.  
- Restart the JLINK software and the target device.  
- Update the JLINK software to the latest version.  
- Contact technical support if the problem persists.

4. **SAfETY**  
Please follow the following safety guidelines to ensure safe operation:  
- Do not touch the internal components of the device.  
- Avoid using the device in a flammable or explosive atmosphere.  
- Do not use the device with damaged cables or connectors.  
- Handle the device with care to avoid physical damage.

5. **TECHNICAL SPECIFICATIONS**  
The JLINK RX has the following technical specifications:  
- Power consumption: 5V DC, 100mA  
- USB interface: USB 2.0  
- Target device: ARM Cortex-M series  
- Operating temperature: 0°C to 50°C

6. **CONTACT**  
For more information, please contact our technical support team:  
- Email: support@jlink.com  
- Phone: +86 755 2999 8888  
- Website: www.jlink.com



